

COWL TOP SIDE INNER PANEL (ASSY)


REPLACEMENT

With the cowl top side panel removed.




REMOVAL

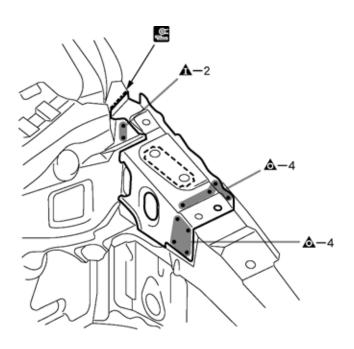


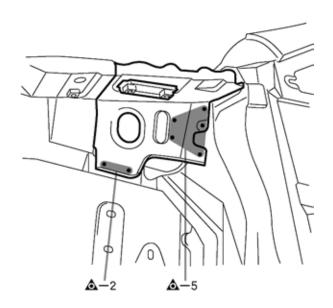

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the
 finish
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

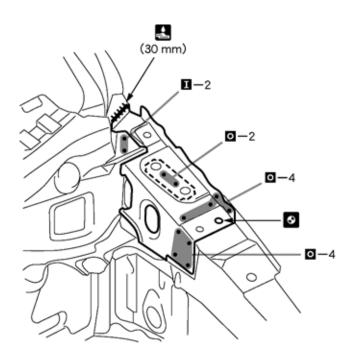

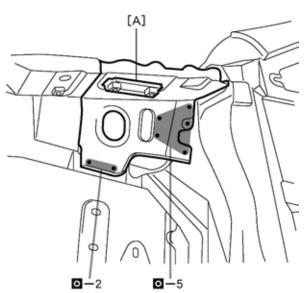

F21130

POINT

1 Inspect the fitting of the front fender and hood, etc., before welding, since this affects the appearance of the finish.

ΡΔΡΤ ΝΔΜΕ

[A] Hood Hinge Mounting Reinforcement 30 mm (1.18 in.)